

## Passive Testing




It is recommended the subject **not consume food, drink or smoke 15 minutes prior to taking a test.**



Press the Test key “**⏻**” to turn the HH4 Alcohol Tester on. Ensure the test type is set to “**Passive Std**” (no mouthpiece). A “**press passive test**” message will display.



Press the Test key – the screen will display “**Please Wait**” then “**Ready for passive test**”. Hold the instrument 50mm in front of the subject’s mouth so that the subject is breathing or talking directly into the device’s inlet.

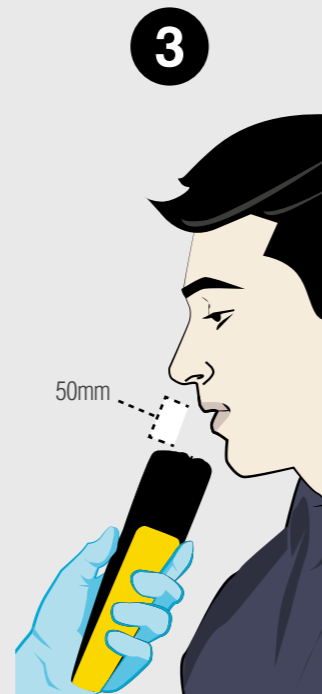

Instruct the subject to count from 20 onwards until you tell them to stop. Whilst they are counting, press the Test key. You will hear 3 clicks. Tell the subject to stop counting after the 3rd click. The device will analyse, emit a long beep, and then display a text based result.



**A green ‘Pass’ screen** with “**Pass No Alcohol**” text indicates that **alcohol is not present.**  
**A red ‘Warning’ screen** with “**Warning Alcohol Present**” text indicates that **alcohol is present.** In the latter instance, the device will switch automatically to a mouthpiece “**Standard**” test and display “**press for active test**”.

## Active Testing



It is recommended the subject **not consume food, drink or smoke 15 minutes prior to taking a test.**



Press the Test key “**⏻**” to turn the HH4 Alcohol Tester on. Ensure the test type is set to “**Standard**” (with mouthpiece). A “**press to test**” message will display.



Attach an \*Alcolizer approved mouthpiece. Press the Test key – the screen will display “**Please Wait**” then “**Blow**”. Hold the breathalyser in front of the subject’s mouth so that the subject can blow into the mouthpiece.



Instruct the subject to blow gently until you tell them to stop. You will hear a sequence of beeps, a click then a long beep to indicate the test is complete. Tell the subject to stop blowing. The device will analyse and then display a colour coded numerical BAC result.



**A green screen** with “.000 g/100ml” BAC indicates that **alcohol is not present.**  
**A yellow screen** with numerical BAC indicates that **alcohol is present but under locally accepted BAC levels.**  
**A red screen** with numerical BAC indicates that **alcohol is present and is over locally accepted BAC levels.**