

Wall Mount 4

alcohol tester

INDUSTRY'S MOST ACCURATE WALL MOUNT BREATH TESTER

- ✓ Fast testing of high volume workforces
- ✓ Efficient, reliable, durable operation
- ✓ Highly configurable to your Alcohol and Other Drugs (AOD) test program
- ✓ Instant results to management
- ✓ Self calibrating every 24 hours
- ✓ Serviced by factory trained technicians

Alcolizer Wall Mount 4 delivers superior breath testing solutions and is trusted by commercial and heavy use industrial customers around the world.

KEEP YOUR WORKFORCE AT WORK WITH ACCURATE, FAST READINGS

The efficient and robust Wall Mount 4 (WM4) operates 24 hours a day in conditions ranging from -5°C to +40°C.

With on-board NATA Certified reference gas and daily auto self-calibration, the WM4 is arguably the most accurate alcohol breath tester, day-in, day-out anywhere in the world. Australian Standards certifies Alcolizer to service annually and still comply to AS3547.

WM4 processes up to 240 workers an hour with an instant response time on a zero BAC reading.

UNPARALLELED CONNECTIVITY

WM4 is the only wall mounted breath tester on the market today running unparalleled connectivity options supported "out-of-the-box" with an on-board ARM Cortex-A8 CPU and Programmable Colour Screen.

WM4 integrates with various third party workforce management and access control solutions via connectivity including (but not limited to): Keypad, Swipe card, WIEGAND, Live Secure Reporting, USB and RS232.

SITE CONFIGURABLE TO SUIT YOUR AOD PROGRAM

Designed to support your Alcohol and Other Drugs (AOD) test programs – WM4 is highly configurable from simple self-test stations and Alcohol test sign-in stations for visitors/contractors through to fully integrated staff management systems.

You can set WM4 to: store your test data; send an email when an exception test occurs; direct your employee should they fail the test; integrate with your site management system and deliver relevant data live to your desktop.

SERVICE AND SUPPORT

Alcolizer alcohol test equipment is Australian designed, developed and manufactured. A network of established factory trained service technicians and Alcolizer authorised distributors are available worldwide to provide expert support. We know our equipment is a critical component in ensuring the health and safety of your workers, site visitors and assets.

AlcoCARE

Our AlcoCARE™ program and our factory trained technicians can support your equipment either on-site or back-to-base – whichever is faster and most cost-effective for you.



Alcolizer Wall Mount 4 with optional camera and keypad.

STANDARD FEATURES

- Self calibrating every 24hours.
- Instant recovery for zero test.
- Unlimited testing.
- Ethernet interface.
- RS232 serial ports.
- 24 month warranty.
- Colour LCD display.
- LAN connectivity in every model.
- Customisable safety and educational messages.
- Australian designed and developed to AS3547 Certification Type 3 and ISO 9001 certification.



OPTIONS

- Numeric keypad.
- Identification camera.
- Wi-Fi connection.
- Cellular data connection.
- Printer. Paper and Label.
- Swipe card.
- AlcoCONNECT Live Data System.
- Separate large straw dispenser.

TECHNICAL SPECIFICATIONS



Alcolizer Wall Mount 4 with optional camera and key pad.

INSTRUMENT APPLICATION	▶ Industry
BAC RANGE	▶ 0.000 - 0.500 g/100ml
ACCURACY	▶ Better than 0.005 at 0.100 BAC g/100ml
RECOVERY TIME	▶ Instant for 0.000 BAC readings (retained on-screen for 5 seconds)
DISPLAY	▶ Four digit BAC reading on 25cm (10") colour graphics LCD screen
SENSOR	▶ Alcohol specific electrochemical fuel cell
MOUTHPIECE	▶ Standard drinking straws
POWER SUPPLY	▶ 240v AC
WEIGHT	▶ 18kg
DIMENSIONS	▶ 560mm H x 390mm W x 190mm D
CALIBRATION	▶ Automatic recalibration every 24 hours (NATA certified gas)
OPERATING TEMPERATURE	▶ RANGE -5°C to +40°C
RESULTS NOTIFICATION	▶ Email reporting and alerts
CONNECTIVITY	▶ Multiple connectivity and integration options


AlcoCONNECT

RELIABLE, FAST, CONFIDENTIAL ACCESS TO YOUR DRUG AND ALCOHOL TEST DATA

The Alcolizer AlcoCONNECT Live Data System combines Alcolizer's innovative testing technology with state-of-the-art business solutions. It is the ideal tool for safety and business managers seeking real time, analysed test results across their business.

FEATURES

- Secure, cloud-based test results storage.
- Remote monitoring.
- Real-time alerts.
- Customised messaging on screen.
- Access from anywhere in the world.
- Automatic service and technical issue alerts delivered directly to Alcolizer Technology.
- Dashboard user interface for at-a-glance results accessibility and database creation.
- Multiple-location synchronisation.

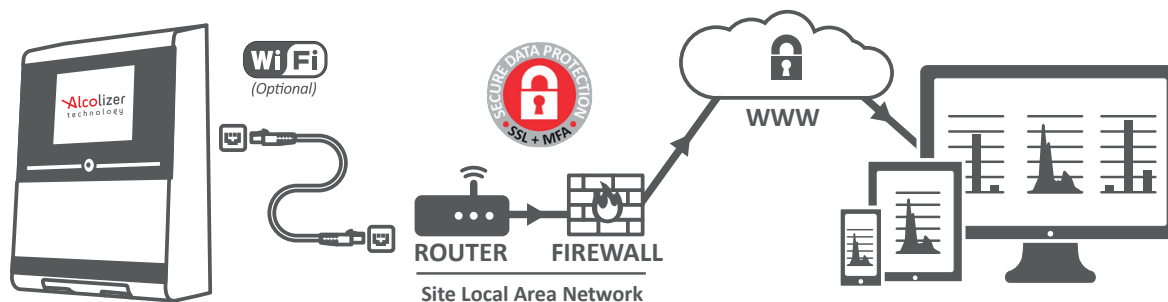

AlcoCARE

SERVICE AND SUPPORT FROM THE ORIGINAL EQUIPMENT MANUFACTURER

Alcohol breath test units are a critical component in the management of the health and safety of companies, personnel and site visitors.

AlcoCARE™ is a customer support service that provides fast, professional product and technical support for your Alcolizer products, either on-site or through our efficient return-to-base calibration in our service centre. Our technicians are factory certified and trained under the guidance of the original design team. Trust Alcolizer Technology – the original equipment manufacturer.

ALCOCARE™ STANDARD Service charge plus parts and a 90 day limited warranty.

ALCOCARE™ PREMIUM Includes labour, parts and a Lifetime Warranty with return to base service option, and an on-site service option.

Call us today for all your workplace Alcohol and Drug Testing solutions: **1300 789 908**